

Bollard Cover Instructions

How to Measure for a Bollard Cover

1. Measure the exact bollard circumference (distance around the outside of bollard) with a flat tape measure.
2. Divide the circumference by 3.14 to determine the bollard's outside diameter.
3. Find the most suitable bollard diameter range in the product information.

NOTE: When purchasing multiple covers, measure each bollard to ensure that you are ordering the correct sizes.

Formula:

Bollard Diameter = Circumference \div 3.14



Still have questions? In North America contact us:



By Phone:
1-800-HOT-HOGS® (468-4647)

Online:
newpig.com

Email:
hothogs@newpig.com

One Pork Avenue • Tipton, PA 16684-0304