


PIG® Absorbent Wringer

RNG202 Absorbents Wringer, Manually Operated,
1 each

Reclaim up to 90% of liquids from your PIG Absorbents to help meet waste minimization goals at your facility.

- Polyurethane "gripper" rollers feature channels to direct liquids away from absorbents and into a collection drum
- 12"-wide throat adjusts to accommodate a wide variety of PIG Absorbents: PIG Super Absorbent Socks, PIG Super Pillows, Mats, Booms and Re-Uz-It Pads
- Mounts on standard open- or tight-head 55-gallon drum (not included)
- Geared for easy hand cranking

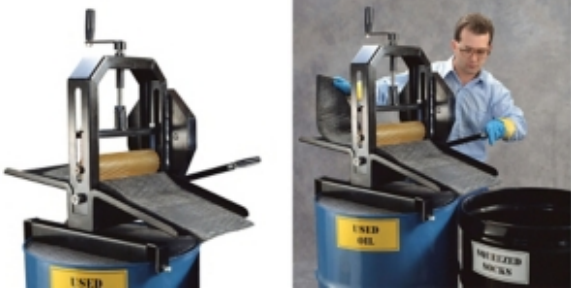

Specifications

Style	Absorbents Wringer
Use With	SUPER Absorbent Socks, SUPER Pillows, Mat, Booms and Re-Uz-it Pads
Color	Black
Dimensions	21" W x 21" L x 24" H
Operation	Manually Operated
Sold as	1 each
Weight	99 lbs.
NSN (National Stock Number)	4250-01-477-0626
Composition	Frame, Tray - Hot-Rolled Steel Rollers - Polyurethane
UNSPSC	47121806
Pigalog® Page Number	Page 288

Metric Equivalent

Dimensions

53.3cm W x 53.3cm L x 61cm H

Weight

44.9 kg

[Technical Information](#)**Technical Documents**[Instructions for PIG Absorbent Wringer](#)**Disclaimers**[Treatment Notice](#)

Wringing or compacting waste may be considered "treatment" by RCRA regulations. You may require a permit to use this product. Please consult with your state EPA waste management office prior to use.

**New Pig**

World's best stuff for leaks, drips and spills.

One Pork Avenue • Tipton, PA 16684-03041-855-493-4647 • Fax: 1-800-621-7447 • newpig.com • hothogs@newpig.com